

sh. No. 1

			NO.SH.2
NO.	PARTS	NO.	PARTS
1.	Case, Pump	46.	Piston, Control
	Slide Block		Retainer, G.P. Bearing
	Rotor, Pump	48.	Ring, Piston
	Pintle, Pump	49.	Gasket, Head, Control
	Cylinder, Pump*	50	Stem, Indicator
	Bushing, Cylinder*	51.	Bushing, Indicator
7.	Piston, Pump		Spring, Indicator
	Cover, Slide Block		Screw, Piston, Control
	Cover, Rotor		Gasket, Seal Housing
	Housing, Gear Pump		Gasket, Cover, Pintle
11.	Ring, Spacer		Gasket, Housing, Control
12.	Ring, Thrust		Gasket, Oil Reservoir
	Cover, Gear Pump		Screw, Piston, Control
	Gear, G.P. Driver		Gasket, Screw, Piston
	Gear, G.P. Driven		Wire, Lock
	Shaft, G.P. Stub		Valve, Pilot, Electric(DS-980
	Flange, Coupling		Gasket, "O" Ring
	Ring, Coupling		Seal, Shaft
	Cover, Pintle		Screw, Cover, G.P.
	Roller, Coupling		Screw, Cover, Rotor
	Ring, Slide Block Spacer		Gasket, Cover Screw, G.P.
22.	Housing, Shaft Seal		Wire, Lock
23.	Shaft, Drive		Wire, Lock
	Head, Control		Wire, Lock
	Gasket, Adapter		Gage, Filter
	Screw, Control Adapter		Filter, Oil
	Gland, Control		Valve, Flow Control
	Pin, Taper		Bearing, Rear Shaft
	Knob, Control		Bearing, Front Shaft
	Handle, Adjusting, Control		Bearing, Front Rotor
	Dowel, Liner, Slide Block		Bearing, Rear Rotor
	Dowel, Liner, Case		Bearing, G.P. Roller
	Liner, Case		Screw, Pintle Cover
	Liner, Slide Block		Ring, Piston, Control
	Screw, Adjusting, Control		Plug, Pipe
	Screw, Gland, Control		Key, Pintle
	Packing, Control		Screw, Cover, Slide Block
	Key, G.P. Drive		Adapter, Piston, Control
	Spacer, Coupling	131.	Piston, Control
	Shim, Front Shaft Bearing		Screw, Cap, Sock. Hd.
	Shim, Front Rotor Bearing		Screw, Housing, G.P.
	Shim, Slide Block Spacer		Head, Control
	Shim, Rear Bearing, Rotor	158.	Washer, Lock
	Shim, Liner, Slide Block		Nut, Lock
	Spacer, Piston, Control		
	•		

*Parts 5 and 6 are furnished only as a complete assembly.

NOTE: When ordering parts be sure to give serial number of pump.